 


High Technology Low Cost



EMME

Instructions for installation,
use e maintenance

ELECTRIC KITCHENS

M62P · M64P · M62V · M64V

M74P · M74PQ · M76P · M72V · M74V

M74PFXE · M74PQFXE · M76PFXE

M74VFXE



CHARACTERISTICS

Supplied by:

Date:

Customer Service:



FAX

e-mail



INDEX

1 Diagram	4
2 Characteristics of the appliances	7
3 Technical data	7
4 Installation instructions	8
4.1 Safety rules	8
4.2 Structure, framework and safety devices of the appliances	8
4.2.1 Oven	8
Electric version GN 1/1 ventilated	8
4.3 Assembly	8
4.3.1 Installation premises	8
4.3.2 Statutory regulations and technical requirements	8
4.3.3 Installation	8
4.3.4 Electrical connection	8
4.3.5 Equipotential	9
5 Operation preparation	9
5.1 Preparation and Start-up	9
5.1.1 Start-up	9
5.1.2 Operator training	9
5.2 Maintenance	9
5.3 Replacing parts	9
5.3.1 Heating element of electric oven GN 1/1	9
5.3.2 Fan electric oven GN 1/1	9
6 Instructions for use	10
6.1 Safety, cleaning and repair rules	10
6.2 Start-up	10
6.2.1 Electricals plates and Pyroceram	10
6.3 Lighting and shutdown of electric oven GN 1/1	11
6.4 Turning the appliance off in case of breakdown	11
6.4.1 What to do in case of failure	11
6.4.2 What to do in case of prolonged period of disuse	11
6.5 Appliance care and frequency of maintenance	11
6.6 Recommendations for handling "stainless steel" industrial kitchens	11
6.6.1 Useful information on "stainless steel"	11
6.6.2 Warnings and advice for maintenance of "stainless steel" appliances	11
6.6.3 WEEE Directive	12
7 Appendix: Electrical diagram	13-19





1 - DIAGRAM



M64P

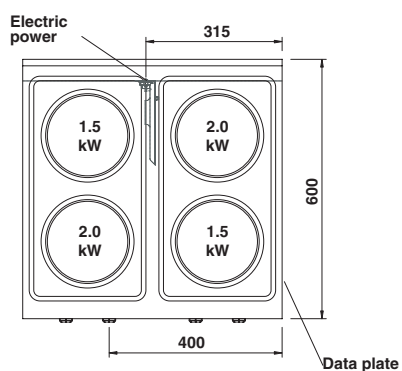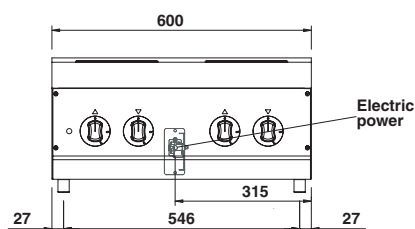





M62P

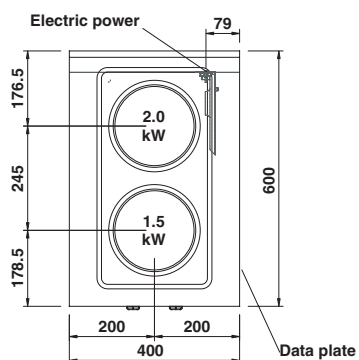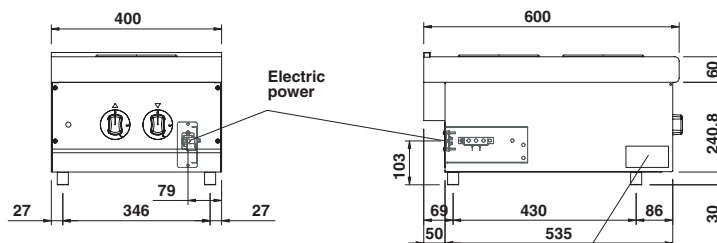



M76P

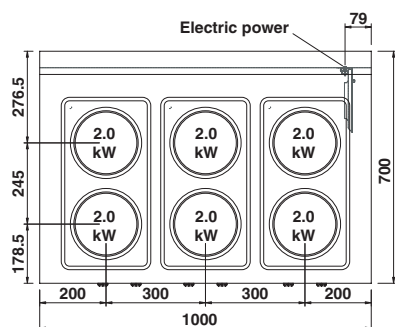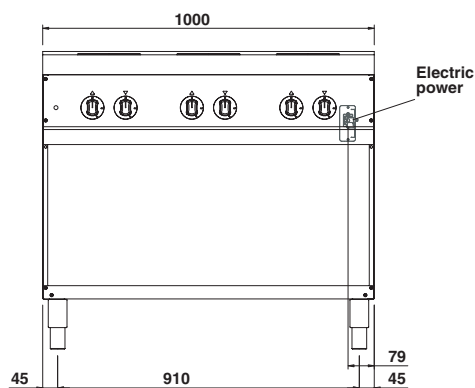




M74P - M74PQ

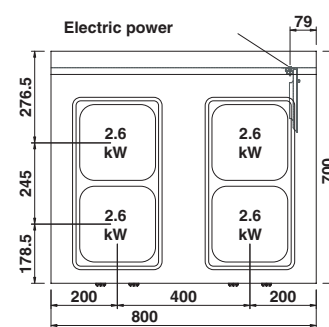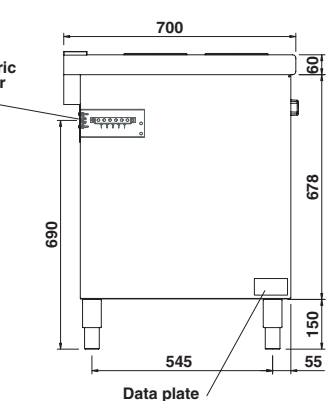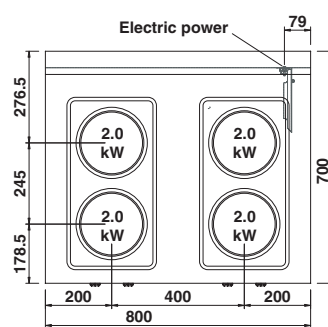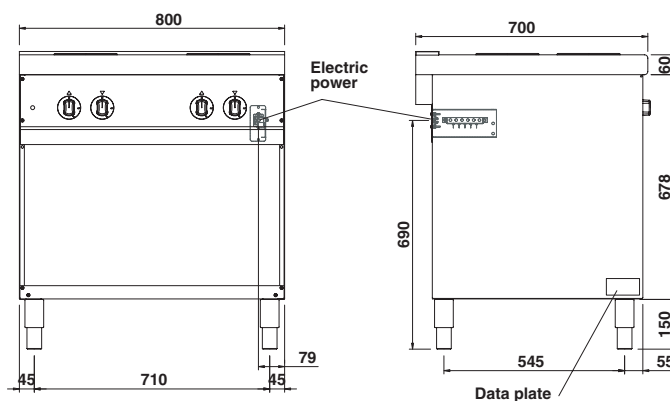



M76PFXE

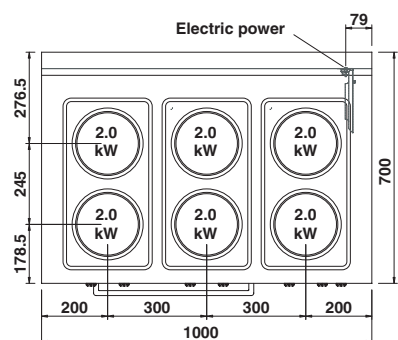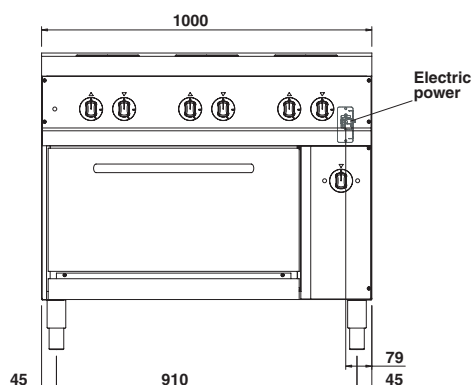

M74PFXE - M74PQFXE

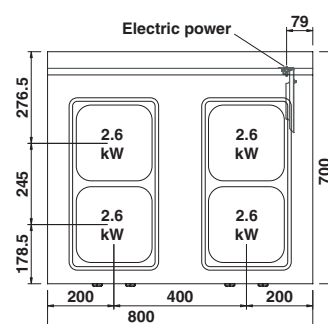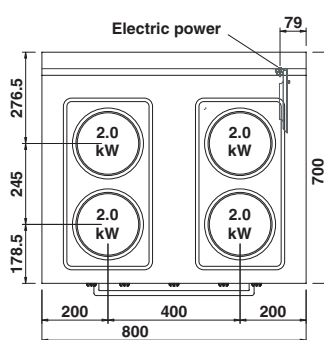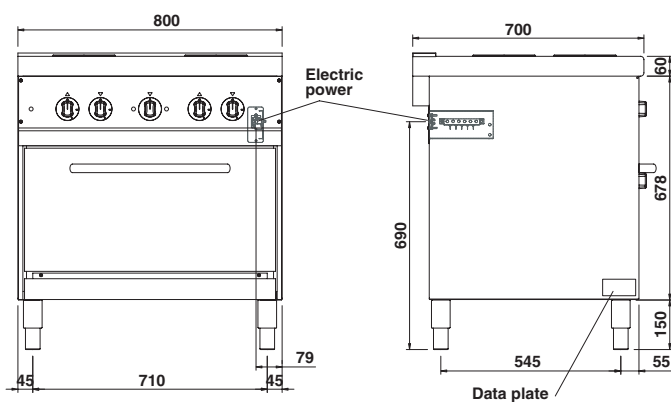


M74VFXE

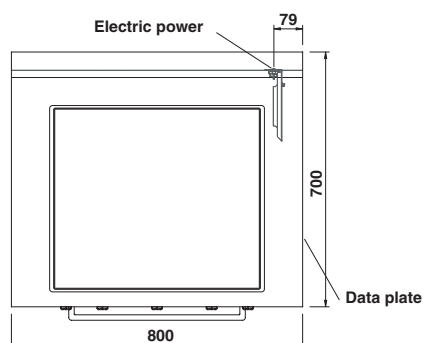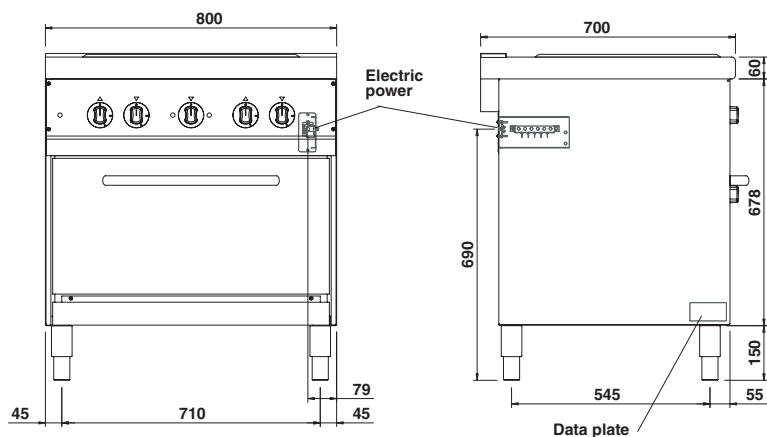


1 - DIAGRAM


M64V

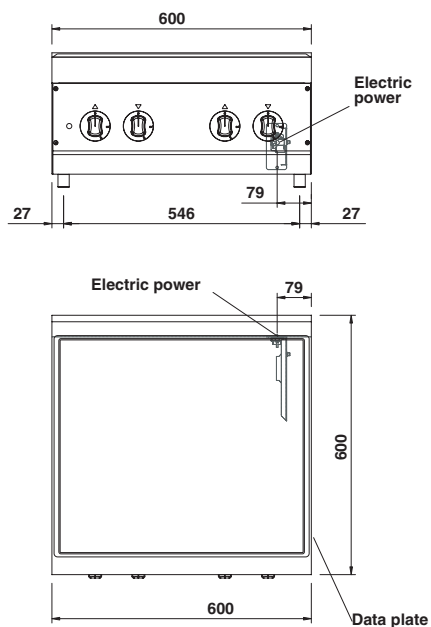


M62V

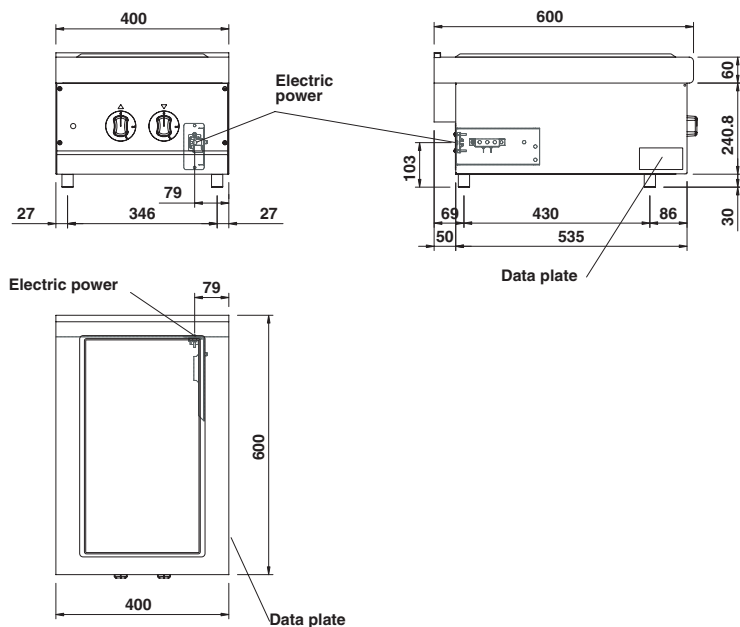

M74V

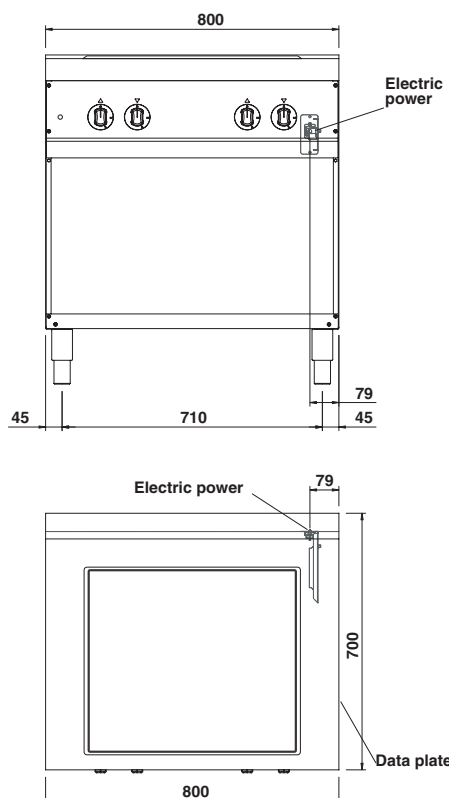

M72V

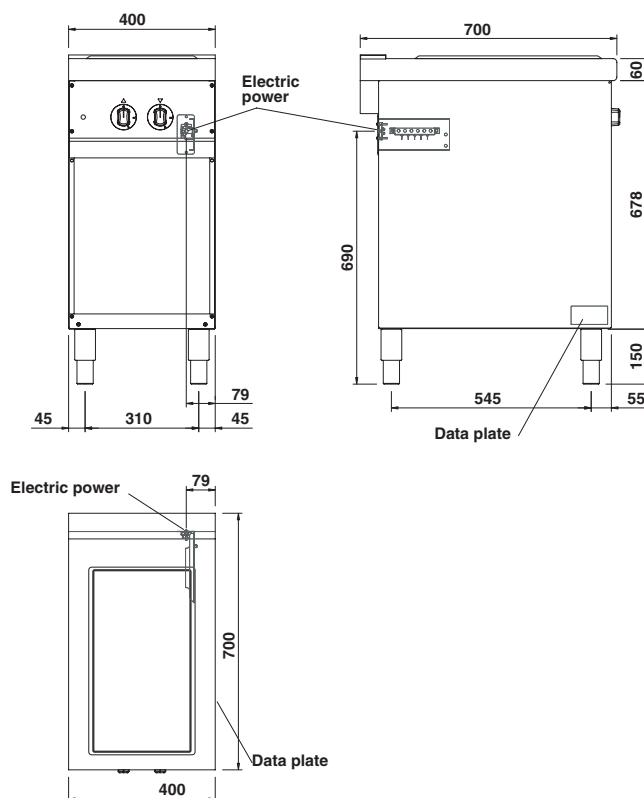

2 - CHARACTERISTICS OF THE APPLIANCES

These appliances are used for professional purposes.

Installation, repair and use must be carried out by expert personnel.

The data plate is located on the appliance and contains all the data needed for installation.

Beware of inexperienced handling.

		CAT/KAT	GAS/GAZ	G30	G31	G20	G25						
		I12H3B/P	P mbar	30	30	20	-	SE	FI	DK	CZ	SK	SI
		I12H3+	P mbar	30	37	20	-	IT	CH	PT			
		I12H3	P mbar	28	37	20	-	ES	IE	GB	GR		
		I12L3B/P	P mbar	30	30	-	25	NL					
		I12EL3B/P	P mbar	50	50	20	20	DE					
TIPO/TYPE		I12E+3+	P mbar	28	37	20	25	FR	BE				
MOD.		I12H3B/P	P mbar	50	50	20	-	AT	CH				
ART.		I12E	P mbar	-	-	20	-	LU					
CE N.		I12H3B/P	P mbar	30	30	-	-	EE	LV	LT			
N.		I12H3+	P mbar	28	37	20	-	EE	LV	LT			
⌚ Qn kW		I12B/P	P mbar	30	30	-	-	NO	MT	CY	IS	HU	
MOD.	m³/h	I12+	P mbar	28	37	-	-	CY					
Predisposto a gas - Gas preset - Prevu pour gaz: Eingestellt für Gas - Preparado para gas - Geschuckt voor:													
VAC	kW		Hz		MADE IN ITALY								
THE APPLIANCE MUST BE CONNECTED IN COMPLIANCE WITH THE LAWS IN FORCE AND INSTALLED IN A WELL-VENTILATED ROOM. READ THE INSTRUCTION MANUALS BEFORE INSTALLING AND USING THE APPLIANCE. THE APPLIANCE MUST BE INSTALLED BY QUALIFIED PERSONNEL.													

3 - TECHNICAL DATA

Model	Description	Dimensions in mm. (LxDxH)
M62P	Electric range 2 plates	400 x 600 x 270
M64P	Electric range 4 plates	600 x 600 x 270
M62V	Electric pyroceramic range with 2 plates	400 x 600 x 270
M64V	Electric pyroceramic range with 4 plates	600 x 600 x 270
M74P	Electric range 4 plates - open compartment	800 x 700 x 900
M76P	Electric range 6 plates - open compartment	1000 x 700 x 900
M74PFXE	Electric range 4 plates - electric convection oven GN 1/1 multifunction	800 x 700 x 900
M76PFXE	Electric range 6 plates - electric convection oven GN 1/1 multifunction	1000 x 700 x 900
M74PQ	Electric range 4 square plates - open compartment	800 x 700 x 900
M74PQFXE	Electric range 4 square plates - electric convection oven GN 1/1 multifunction	800 x 700 x 900
M72V	Electric pyroceramic range with 2 plates - open compartment	400 x 700 x 900
M74V	Electric pyroceramic range with 4 plates - open compartment	800 x 700 x 900
M74VFXE	Electric pyroceramic range with 4 plates - electric convection oven GN 1/1 multifunction	800 x 700 x 900

TABLE 1

Model	Heating element			Plates round		Plates square	Oven 2500 W	Total Power	Voltage rating	Lead wire Section
	1200	1800	2300	1500 W	2000 W	2600 W				
M62P	-	-	-	1	1	-	-	3.5 kW	400V 3N or 230V 3	5 x 1.5 mm ² or 4 x 2.5 mm ²
M64P	-	-	-	2	2	-	-	7.0 kW	400V 3N or 230V 3	5 x 1.5 mm ² or 4 x 2.5 mm ²
M62V	1	-	1	-	-	-	-	3.5 kW	400V 3N or 230V 3	5 x 1.5 mm ² or 4 x 2.5 mm ²
M64V	2	1	1	-	-	-	-	6.5 kW	400V 3N or 230V 3	5 x 1.5 mm ² or 4 x 2.5 mm ²
M74P	-	-	-	-	4	-	-	8.0 kW	400V 3N or 230V 3	5 x 2.5 mm ² or 4 x 4 mm ²
M76P	-	-	-	-	6	-	-	12.0 kW	400V 3N or 230V 3	5 x 2.5 mm ² or 4 x 6 mm ²
M74PFXE	-	-	-	-	4	-	1	10.5 kW	400V 3N or 230V 3	5 x 2.5 mm ² or 4 x 4 mm ²
M76PFXE	-	-	-	-	6	-	1	14.5 kW	400V 3N or 230V 3	5 x 2.5 mm ² or 4 x 6 mm ²
M74PQ	-	-	-	-	-	4	-	10.4 kW	400V 3N or 230V 3	5 x 2.5 mm ² or 4 x 4 mm ²
M74PQFXE	-	-	-	-	-	4	1	12.9 kW	400V 3N or 230V 3	5 x 2.5 mm ² or 4 x 6 mm ²
M72V	1	-	1	-	-	-	-	3.5 kW	400V 3N or 230V 3	5 x 1.5 mm ² or 4 x 2.5 mm ²
M74V	2	1	1	-	-	-	-	6.5 kW	400V 3N or 230V 3	5 x 1.5 mm ² or 4 x 2.5 mm ²
M74VFXE	2	1	1	-	-	-	1	9.0 kW	400V 3N or 230V 3	5 x 2.5 mm ² or 4 x 4 mm ²

○ round plates Ø18

□ square plates 22x22

4 - INSTALLATION INSTRUCTIONS

4.1 Safety rules

- Only a local gas utility technician is authorized to carry out gas installations and connections. The statutory regulations (applied in Germany VDE, Austria ÖVE, Switzerland SEV, etc.) and connection conditions performed by the gas utility must be strictly observed.
- In compliance with international regulations, when connecting the appliance to the mains power supply, a device with a minimum aperture of 3 mm between contacts must be fitted upstream of the appliance, allowing omnipolar disconnection of the appliance from the mains. Also, a high-sensitivity automatic differential switch must be installed which protects against direct or indirect contact with live electrical parts and against current leakage (maximum current leakage permissible by regulations is 1 mA/kW).
- Connection to a power balance system for the installation in a all is given through a connection point. Follow the VDE 0100 T 410 connection rules or local rules.
- Compare technical datas on grey stickers to those written on this manual and present power supply.
- Do not bend, crush or damage the cables against sharp corners.
- Lay the cables so as to avoid contact with extremely hot surfaces.
- Connection to the grid must be carried out with at least a cable type NYM or H07RN-F.
- The cable - which is totally sheathed - must be led inside the appliance through the cable clamp and cable raceway installed on the appliance.
- Ventilation system installation can be carried out only by expert personnel.
- If the appliance is to be installed near walls, dividing walls, kitchen equipment or decorative panelling, these should be in non-flammable material. If not, all appliances must be coated with thermal-insulation fireproof material. Make sure that all fire prevention standards and safety precautions are strictly adhered to.

4.2 Structure, equipment and safety devices of the unit

Robust steel frame, with 4 height adjustable feet.
Steel outer panelling.
Electric round plates made of cast-iron or pyroceram.

4.2.1 Oven

The cooking chamber is made of stainless steel.
The runners for the pans are made of chromium-plated steel.
Extractable chromium-plated steel grill..
The door, with double wall and thermal insulation, is equipped with an insulated handle and a hinge with balanced spring.
The insulation of the cooking chamber is rockwool.

Electric version GN 1/1 ventilated

The heating element is place in the rear around the fan and is protected by a bulkhead. Temperature adjustment between 50°C and 300°C is made by a thermostat connected to a switch.
The lighting of the heating element is indicated by 2 indicator lights.

4.3 Assembly

4.3.1 Installation premises

The appliance must be installed in a well-ventilated room, and if possible under a range hood (check current regulations).

The appliance can be installed on its own or with other similar equipment.

If the appliance is to be installed near inflammable walls, a minimum distance of 150 mm around the sides and back should be allowed.

If this distance cannot be obtained, take proper heat-protection action such as fitting tiles or thermal radiation protection material to the walls.

4.3.2 Statutory regulations and technical requirements

During installation of the appliance, the following regulations must be adhered to:

- Relevant legal directives;
- Local building and combustion regulations;
- "Technical rules for gas systems" worksheet;
- "Technical rules for liquid gas" worksheet;
- "Gas installations in industrial kitchens" worksheet;
- Relative accident prevention standards;
- Local gas utility regulations;
- Local building and fire codes.

4.3.3 Installation

Installation, start-up and maintenance should only be carried out by expert personnel.

All work required to install the appliance should be carried out in compliance with all local standards and regulations.

The manufacturers decline all responsibility where poor performance is due to incorrect installation in disregard of the above conditions.

4.3.4 Electrical connection

Before connecting the unit to the mains, check that:

- The mains voltage corresponds to the values shown on the data plate;
- The earth is in working order;
- The power cord is suitable to the electrical input of the appliance (see table 1 pag. 7) and approved. The cord must be at least type H07 RN-F.

The ground wire must be long enough to prevent tug after the cable lead wires in case of raceway breakage.

Also, up the line from the unit, there must be a device with contact opening of at least 3 mm which makes it possible to disconnect the appliance in omnipolar mode.

To this end, for example, safety contactors may be used.

The omnipolar switch must be located near the appliance and be readily accessible.

4 - INSTALLATION INSTRUCTIONS

4.3.5 Equipotential

The appliance must be hooked up to a unipotential system. The required terminal is located near the power cable and it is marked by a tag with a symbol ☹.



The manufacturers cannot be held responsible for any damage due to inadequate or incorrect installation. Under such circumstances the guarantee will be considered null and void.

5 - SET-UP FOR OPERATION

5.1 Preparation and Start-up

Before starting up the appliance, remove the protective wrapping. Then carefully clean the working surface and the external parts with lukewarm water and detergent, using a damp rag to remove all traces of anti-rust material applied in the factory, then dry with a clean cloth.

5.1.1 Start-up

To start up the appliance, see the instructions for regular use.

5.1.2 Operator training

- Explain and show the user how the machine works according to the instructions, and hand him this manual.
- Remind the user that any structural alterations or any building modification or renovation may affect the combustion air supply, thus requiring a second operation check.

5.2 Maintenance



Attention! Before doing any repair or maintenance work, unplug the appliance.

- Never leave the hotplates on unused!
- Only use flatbottomed pots and pans, and make sure that the diameter of the pan is never smaller than the diameter of the hotplate it is being used on.

5.3 Replacing parts



All parts must be replaced by authorized technicians only!

To replace the following parts first remove all the control knobs and control panel (after loosening the fixing screws), then extract the ignition wire.

5.3.1 Heating element of electric oven GN 1/1

Unplug the appliance from the electrical mains!

To remove the heating element (pos. 6 fig. 2), remove the rear bulkhead, unscrew the screws fixing the heating element to the oven, pull the heating element forward with relative wires.

Disconnect the wires, and install a new heating element in reverse order.

5.3.2 Fan of electric oven GN 1/1

Unplug the appliance from the electrical mains!

To replace the fan remove the back unscrew the sight screws, disconnect the wires from the motor, from the inside of the chamber remove the rear bulkhead fan cover and the fan (pos. 1 fig. 2) by loosening the locking nut (pos. 2 fig. 2 "NB. the nut is with left thread").

Loosen the bolts (pos. 3 fig. 2) that hold the motor (pos. 4 fig. 2) on the oven and pull off from rear. Re-install in reverse order positioning in the correct way the seal protection (pos. 5 fig. 2) and power mains.



After any maintenance or repair work, replace the control panel and the lower panel.

6 - INSTRUCTIONS FOR USE


6.1 Safety, cleaning and repair rules

- ⚠ • This appliance is used for the preparation of meals at industrial level. Usage and cleaning can be carried only by expert personnel. Maintenance and repair can be carried out only by skilled technical personnel.
- ⚠ • These indications must be communicated to all those concerned during internal training.
- ⚠ • Attention! This appliance must be constantly watched over when being used!
- ⚠ • Grease and overheated oil can catch fire. Use this appliance only under constant control. Never use water to put out grease or oil! Cover with a lid, turn off the hot plate and remove pot from the burner.
- ⚠ • Do not overload the kitchen. For proper use, pots should not be bigger than the flames.
- ⚠ • Parts of the appliance and attachments exposed to food must be cleaned with detergents and rinsed thoroughly with potable water.
- ⚠ • Do not clean the appliance using water jets or steam, whether direct or pressurized!
- ⚠ • If the room is being cleaned with water/steam jets or high-pressure equipment, it is necessary to switch off the appliance first!
- ⚠ • Before starting to clean the appliance, disconnect from the mains.
- ⚠ • Do not use inflammable liquid to clean the appliance.
- ⚠ • Repairs may be carried out only by skilled personnel.
- ⚠ • During repairs, the appliance must undergo voltage omnipolar insulation (local switch, i.e. safety load cut-off switch).
- ⚠ • Noise emission values of the appliance in operation are below 70dB (A). This value is compulsory according to certain national safety standards.

WARNING

- ⚠ **Attention!** The manufacturer declines all responsibility concerning mistakes included in these instructions due to translating or printing errors: the manufacturer also reserves the right to change the product as he see fits, though without changing its essential features. The manufacturer declines all responsibility for any non-compliance with the provisions contained in this manual.

Fig. 1

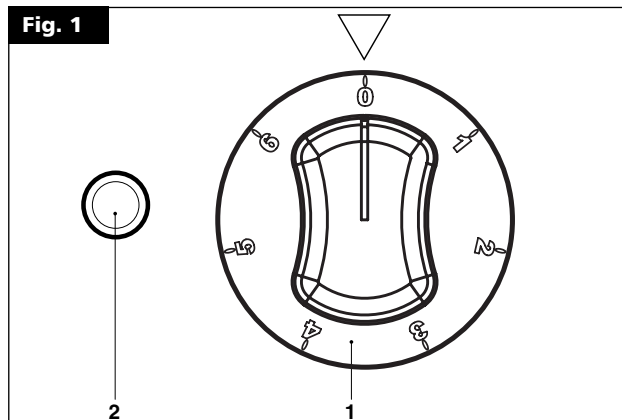

6.2 Start-up

6.2.1 Electricals plates and Pyroceram

Turn on the main switch upstream of the appliance.

Turn the knob (pos. 1 fig. 1) on the selected plate to the required position from 1 to 6. The green indicator light (pos. 2 fig. 1) will indicate the heating element is on.

We advise first turning the hotplate up to maximum temperature. Once this has been reached, turn the knob to the required heat.

To turn any plate off, simply turn the knob back to "0".

- 6 to begin cooking max. 5/10 min;
- 5 for high temperature cooking;
- 4 for medium temperature cooking;
- 3 to continue cooking large quantities;
- 2 to continue cooking small quantities;
- 1 to keep food hot or melt butter;
- 0 plate off.

Fig. 2


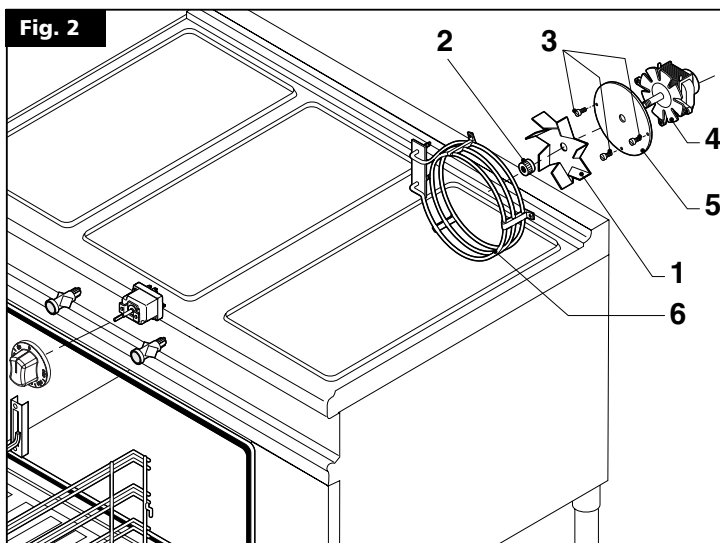


Fig. 2A

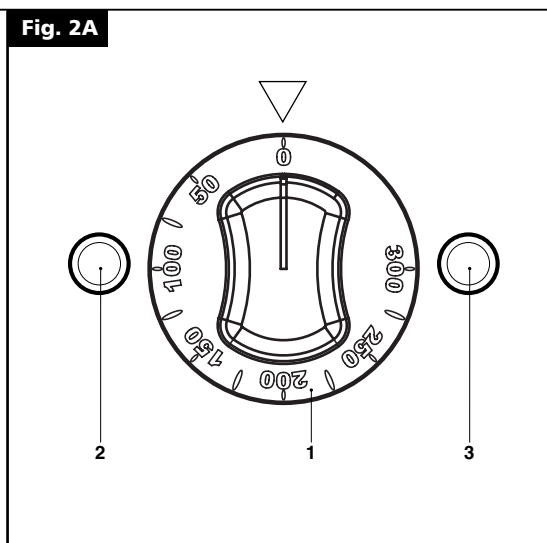

6.3 Lighting and shutdown of electric oven GN 1/1

With knob (pos. 1 fig. 2A) turn the thermostat from the "0" position to a desired temperature between 50°C and 300°C; the indicator light will come on; the green one (pos. 2 fig. 2A) shows that the appliance is on, the yellow one (pos. 3 fig. 2A) indicates that the resistances are operational, as soon as the set-up temperature is reached, the indicator light goes off.

To turn the appliance off, turn the knob to position "0".

6.4 Turning the appliance off in case of breakdown

6.4.1 What to do in case of failure

In case of breakdown or malfunctioning or failure turn off the plates and the oven. Switch off any electric power. Call the service centre.

6.4.2 What to do in case of prolonged period of disuse

When the appliance is not to be used for a long time, clean thoroughly, as instructed in the chapter 6.5 "Appliance care and frequency of maintenance", switch off any electric power.

6.5 Appliance care and frequency of maintenance



Attention! When cleaning, carefully avoid washing the appliance with direct water jets or high-pressure water!

Cleaning must be performed when the appliance is cold.

Thorough daily cleaning of the appliance, after disconnecting it, will keep it in perfect working order and make it last longer. All steel parts should be cleaned with water and a detergent, using a damp cloth; do not use abrasive substances or corroding detergents.

Do not use steel wool, which could cause rust to form.

For the same reason, avoid touching the appliance with anything made of iron. Do not clean with sandpaper and lubricating gel paper. If absolutely necessary, you may use pumice powder.

If the appliance is extremely dirty, use a synthetic sponge (i.e. Scotchbrite sponge).

After cleaning the appliance, rinse with clean water and wipe with a clean cloth.

All maintenance and repair work must be carried out by authorized technicians only.

The appliance must be checked at least once a year. For this reason, a service agreement contract is recommended.

6.6 Recommendations for the treatment of stainless "steel industrial" kitchens

6.6.1 Useful information on "stainless steel"

Industrial kitchens are generally made of "stainless steel" having the following material codes:

- 1.4016 or 1.4511 = magnetizable chromed steels
- 1.4301, 1.4401 and 1.4571 = non-magnetizable chromed steels

Chromed steels have favourable thermo-technical characteristics. In fact, they have less of a tendency to warp due to the effect of heat.

Chrome-nickel steels, instead, have good corrosion resistance features.

"Stainless steel" corrosion resistance is given by an inactive coat that builds up on the surface by coming into contact with oxygen.

The oxygen in the air is already enough to build up the inactive coat that allows automatic removal of anomalies and damage due to mechanical actions. The inactive coat builds up or re-builds up faster if the steel comes in contact with running water containing oxygen.

A more powerful effect is given by oxidative acids (nitric acid, oxalic

acid). These acids are used if the steel has undergone strong chemical stresses, hence generally losing its inactive coat.

The inactive layer can be chemically damaged or jeopardized by reducing agents (oxygen consumption) if they come in contact with the steel, concentrated or at high temperatures. These active substances include for instance:

- saline and sulphurous substances
- chlorides (salts)
- concentrated spices such as mustard, vinegar essences, soup cubes, kitchen salt solutions, etc.

More damage can be caused by:

- outside rust (i.e. from other components, tools or incipient rust)
- iron particles (i.e. file dust)
- contact with non-ferrous metals (element build up)
- lack of oxygen (i.e. no air inlet, water lacking oxygen).

6.6.2 Warnings and advice for maintenance of "stainless steel" appliances


- "Stainless" steel equipment surfaces must be kept clean and in contact with air at all times. When not running, keep appliance doors open so as to allow air to run through it.
- Regularly remove calcium, grease, starch, and egg white deposits where rust may build up if there is lack of air. Do not use bleaching products or products containing chloride. Follow all indications given by the company concerning special soaps and cleaning methods to be used for the appliance. If no specific cleaning recommendations are available, it is necessary, however, to use detergents having a low chloride content. After cleaning, remove all soap residues with plenty of clean water and thoroughly dry the surfaces.
- Minimize contact of "stainless steel" with concentrated acids, spices, salts, etc. Even acid vapours coming from cleaning the tiles favour "stainless steel" corrosion.
- Particularly for pots and multiple appliances, it is not recommended to load the cooking chamber only with food having a high salt content.
It is preferable to cook different food together, i.e. fatty dishes or vegetables containing acids.
- Avoid damaging the "stainless steel" surface, in particular with different metals. Residues from other metals help build up the formation of chemical microelements that may cause rust. At any rate, it is appropriate to avoid contact between iron and steel since it produces rust. Any contact between "stainless steel" and iron (steel wool, pipeline chips, chalybeate waters) can start corrosion phenomena.
- As for mechanical cleaning, it is recommended to use only steel wool or natural, plastic or steel bristle brushes. Steel wool or brushes with "stainless steel" can cause rust due to rubbing. Newly formed rust spots can be removed with slightly abrasive liquid soaps or fine-grained sand paper. Larger rust spots can be removed with 2-3% of hot oxalic acid solution. If these cleaning products do not do the job, a nitric acid (10%) treatment is required.



Attention! These treatments can be carried out only by expert personnel according to current regulations!

6.6.3 The 2002/96/EC (WEEE) Directive:

information to users

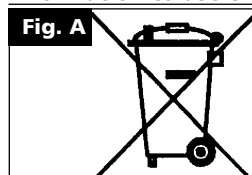

This informational note is meant only for owners of equipment marked with the symbol shown in fig. A on the adhesive label featuring the technical specifications applied on the actual product (the label also giving the serial number).

This symbol indicates that the product is classified, according to the regulations in force, as an item of electrical and electronic equipment and conforms to EU Directive 2002/96/EC (WEEE) meaning that, at the end of its service life, it must be treated separately from domestic waste, i.e. it must be handed in free of charge to a separate waste electrical and electronic equipment collection centre or returned to the reseller when buying a new equivalent item of equipment.

The user is responsible for delivering the unit at the end of its life to the appropriate collection facilities. Failure to do so shall result in the user being subject to the penalties prescribed by the legislation in force on waste.

Suitable separated collection so that the unit no longer used can be sent off for environmentally compatible recycling, treatment and disposal helps avoid possible negative effects on the environment and on health and facilitates the recycling of the product's component materials.

For more detailed information on available collection systems, contact the local waste disposal service or the shop you purchased the unit from.

Producers and importers fulfil their responsibility for environmentally compatible recycling, treatment and disposal both directly and by joining a collective scheme.



NOTES

7 - APPENDIX: ELECTRICAL DIAGRAMS

M62P - 1xR1 + 1xR2

M62V - 1xR3 + 1xR4

M72V - 1xR1 + 1xR2

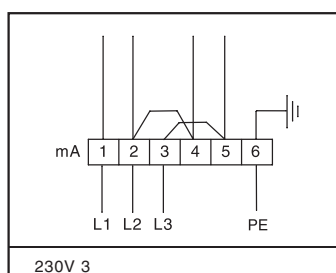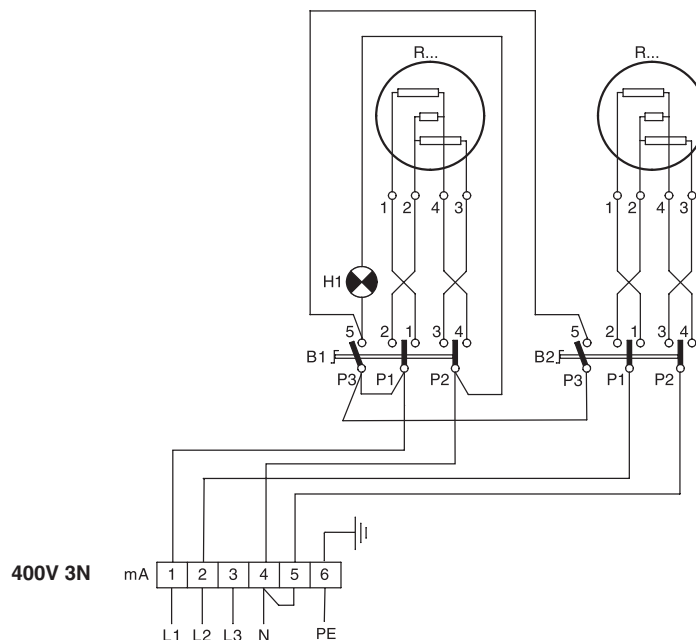

Position plates

B1 plate rear

B2 plate front

R1						R2						R3						R4										
1500 w	6	●	●	●	●	2000 w	6	●	●	●	●	1200 w	6	●	●	●	●	2300 w	6	●	●	●	●					
1150 w	5	●	●	●	●	1150 w	5	●	●	●	●	700 w	5	●	●	●	●	1200 w	5	●	●	●	●					
850 w	4	●	●	●	●	850 w	4	●	●	●	●	340 w	4	●	●	●	●	600 w	4	●	●	●	●					
300 w	3	●	●	●	●	300 w	3	●	●	●	●	340 w	3	●	●	●	●	600 w	3	●	●	●	●					
220 w	2	●	●	●	●	220 w	2	●	●	●	●	170 w	2	●	●	●	●	300 w	2	●	●	●	●					
135 w	1	●	●	●	●	175 w	1	●	●	●	●	125 w	1	●	●	●	●	230 w	1	●	●	●	●					
	0						0						0						0									
	5	2	1	3	3	4		5	2	1	3	3	4		5	2	1	3	3	3	4		5	2	1	3	3	4
	P3		P1		P2			P3		P1		P2			P3		P1		P2									

- mA** Terminal board
B1 Commutator plate rear
B2 Commutator plate front
H1 Green indicator light
R1 Heating element 1500 W
R2 Heating element 2000 W
R3 Heating element 1200 W pyroceram
R4 Heating element 2300 W pyroceram
 Total power: 3.5 kW


7 - APPENDIX: ELECTRICAL DIAGRAMS

M64P - 2xR1 + 2xR2

M64V - 2xR3 + 1xR4 + 1xR5

M74P - 4xR2

M74V - 2xR3 + 1xR4 + 1xR5

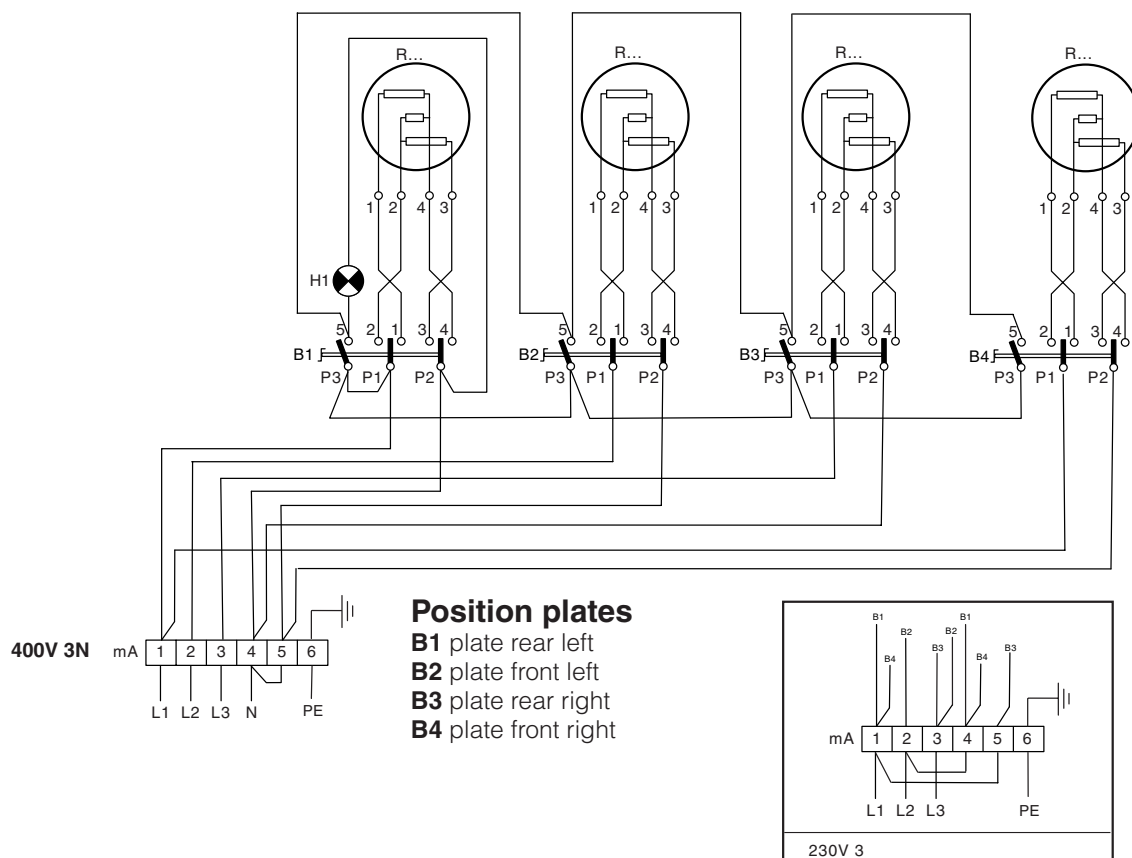

R1

1500 w	6	•	•	•	•	•
1150 w	5	•	•	•	•	•
850 w	4	•	•	•	•	•
300 w	3	•	•	•	•	•
220 w	2	•	•	•	•	•
135 w	1	•	•	•	•	•
0	•	•	•	•	•	•
	5	2	1	3	3	4
	P3	P1	P2			

R2

2000 w	6	•	•	•	•	•
1150 w	5	•	•	•	•	•
850 w	4	•	•	•	•	•
300 w	3	•	•	•	•	•
220 w	2	•	•	•	•	•
175 w	1	•	•	•	•	•
0	•	•	•	•	•	•
	5	2	1	3	3	4
	P3	P1	P2			

R3

1200 w	6	•	•	•	•	•
700 w	5	•	•	•	•	•
340 w	4	•	•	•	•	•
340 w	3	•	•	•	•	•
170 w	2	•	•	•	•	•
125 w	1	•	•	•	•	•
0	•	•	•	•	•	•
	5	2	1	3	3	4
	P3	P1	P2			

R4

1800 w	6	•	•	•	•	•
1000 w	5	•	•	•	•	•
500 w	4	•	•	•	•	•
500 w	3	•	•	•	•	•
250 w	2	•	•	•	•	•
180 w	1	•	•	•	•	•
0	•	•	•	•	•	•
	5	2	1	3	3	4
	P3	P1	P2			

R5


2300 w	6	•	•	•	•	•
1200 w	5	•	•	•	•	•
600 w	4	•	•	•	•	•
600 w	3	•	•	•	•	•
300 w	2	•	•	•	•	•
230 w	1	•	•	•	•	•
0	•	•	•	•	•	•
	5	2	1	3	3	4
	P3	P1	P2			

- mA** Terminal board
B1 Commutator plate rear left
B2 Commutator plate front left
B3 Commutator plate rear right
B4 Commutator plate front right
H1 Green indicator light
R1 Heating element 1500 W
R2 Heating element 2000 W
R3 Heating element 1200 W pyroceram
R4 Heating element 1800 W pyroceram
R5 Heating element 2300 W pyroceram
- Total power: M64P 7.0 kW
M64V - M74V 6.5 kW
M74P 8.0 kW

7 - APPENDIX: ELECTRICAL DIAGRAMS

M74PFXE - 4xR1 + 1xR6

M74VFXE - 2xR3 + 1xR4 + 1xR5 + 1xR6

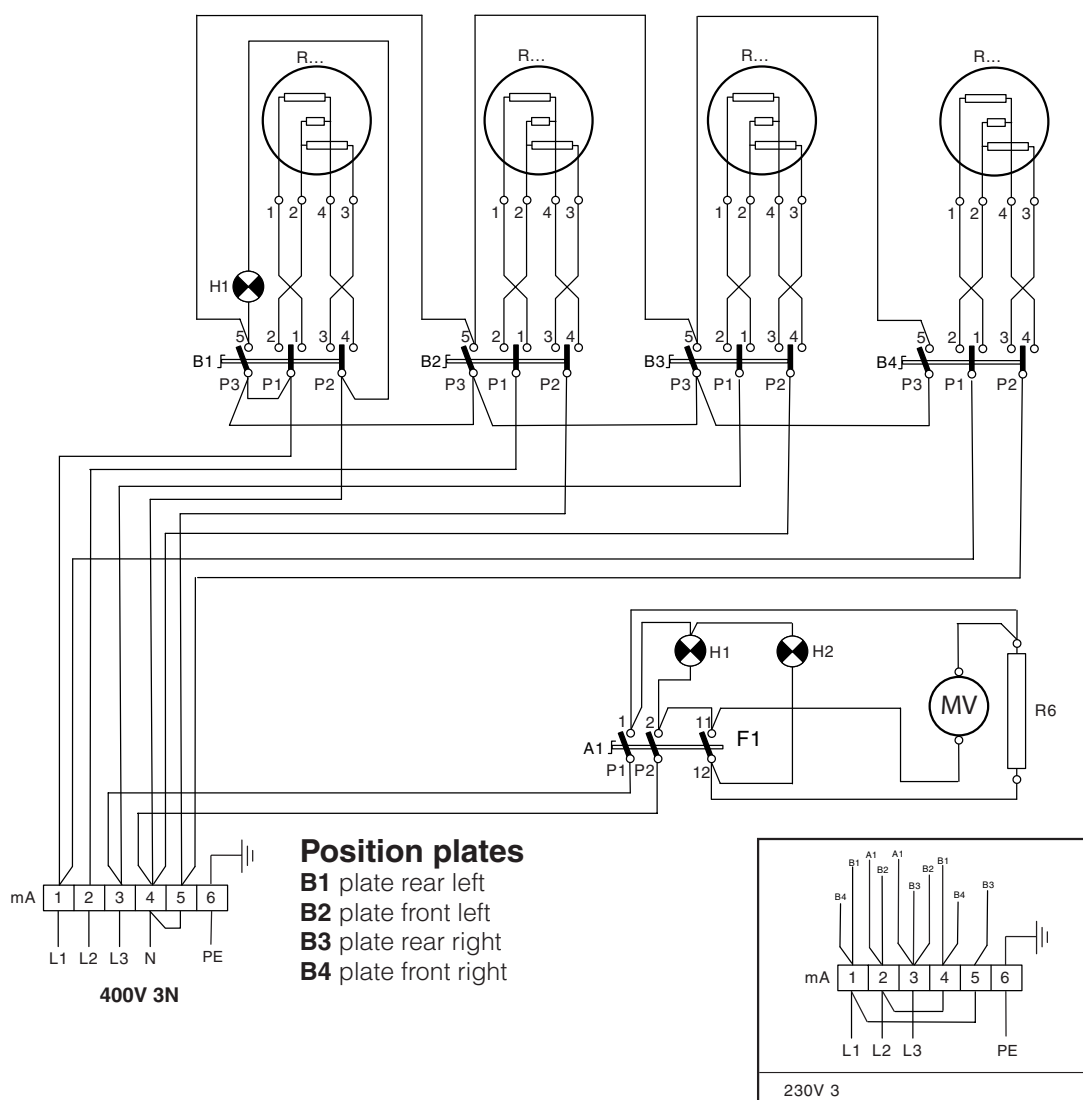

mA

Terminal board

B1

Commutator plate rear left

B2

Commutator plate front left

B3

Commutator plate rear right

B4

Commutator plate front right

A1

Switch oven

F1

Thermostat oven

H1

Green indicator light

H2

Yellow indicator light

MV

Motorized fan

R1

Heating element 2000 W

R3

Heating element 1200 W pyroceram

R4

Heating element 1800 W pyroceram

R5

Heating element 2300 W pyroceram

R6

Heating element 2500 W oven

Total power:

M74PFXE 10.5 kW

M74VFXE 9.0 kW

R1

2000 w	6	•	•	•	•	•
1150 w	5	•	•		•	•
850 w	4	•	•		•	
300 w	3	•	•		•	
220 w	2			•	•	
175 w	1		•	•	•	
0						
	5	2	1	3	3	4
	P3	P1	P2			

R3

1200 w	6	•	•	•	•	•
700 w	5	•	•		•	•
340 w	4	•	•		•	
340 w	3	•	•		•	
170 w	2	•		•	•	
125 w	1		•	•	•	
0						
	5	2	1	3	3	4
	P3	P1	P2			


R4

1800 w	6	•	•	•	•	•
1000 w	5	•	•		•	•
500 w	4	•	•		•	
500 w	3	•	•		•	
250 w	2			•	•	
180 w	1	•		•	•	
0						
	5	2	1	3	3	4
	P3	P1	P2			

R5

2300 w	6	•	•	•	•	•
1200 w	5	•	•		•	•
600 w	4	•	•		•	
600 w	3	•	•		•	
300 w	2	•		•	•	
230 w	1	•	•	•	•	
0						
	5	2	1	3	3	4
	P3	P1	P2			

M76P - 6xR1

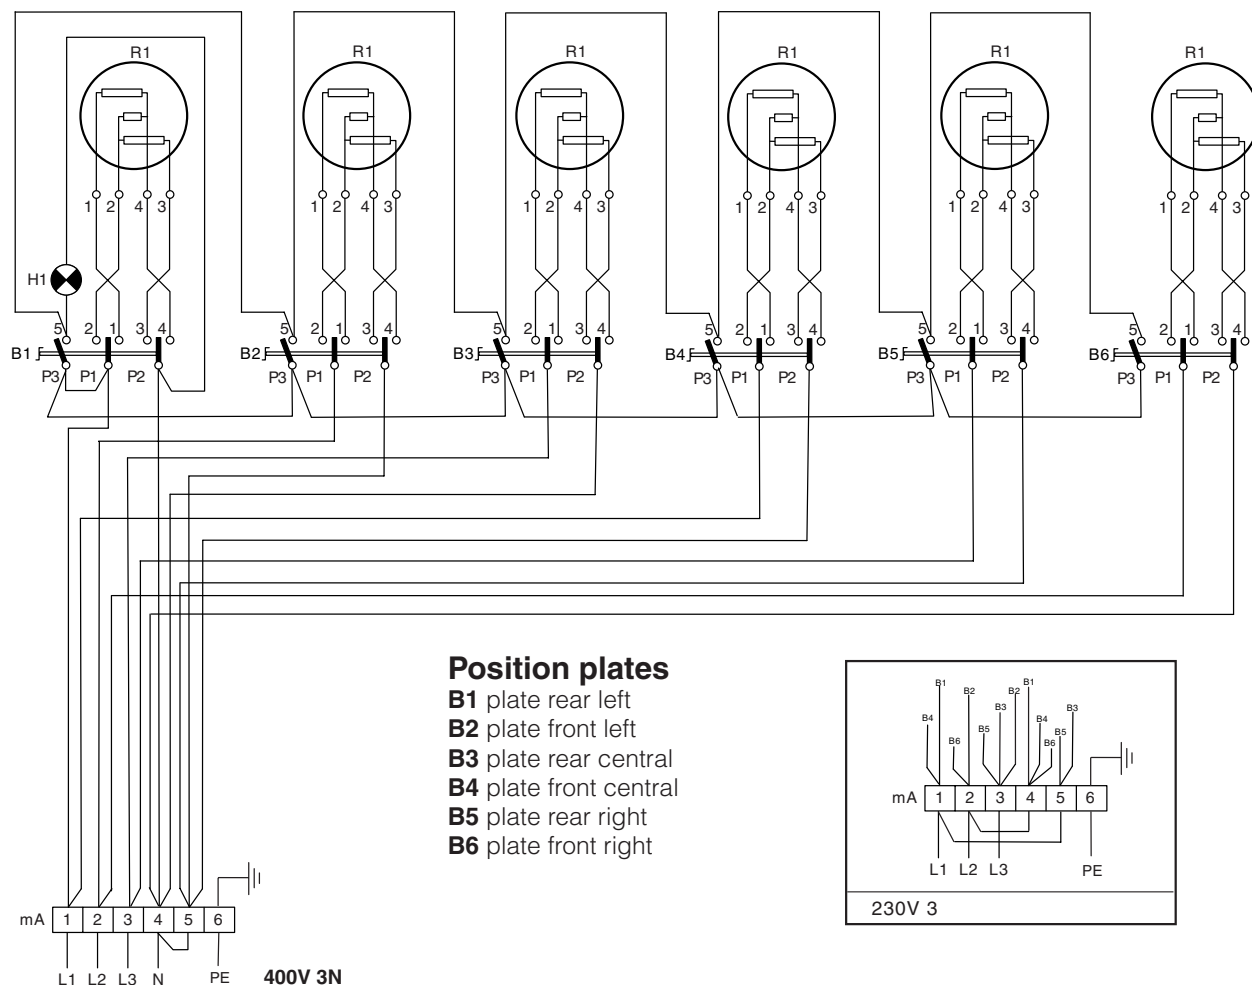



- mA** Terminal board
B1 Commutator plate rear left
B2 Commutator plate front left
B3 Commutator plate rear central
B4 Commutator plate front central
B5 Commutator plate rear right
B6 Commutator plate front right
H1 Green indicator light
R1 Heating element 2000 W
 Total power: 12.0 kW

R1

2000 w	6	●	●	●	●	●
1150 w	5	●	●			●
850 w	4	●	●			●
300 w	3	●	●			●
220 w	2	●		●		●
175 w	1	●		●		●
0						
	5	2	1	3	3	4
	P3	P1	P2			

7 - APPENDIX: ELECTRICAL DIAGRAMS

M76PFXE - 6xR1 + 1xR6

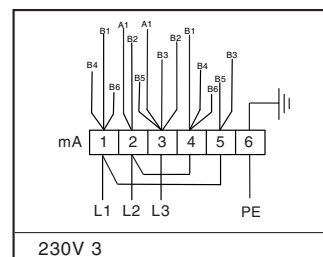
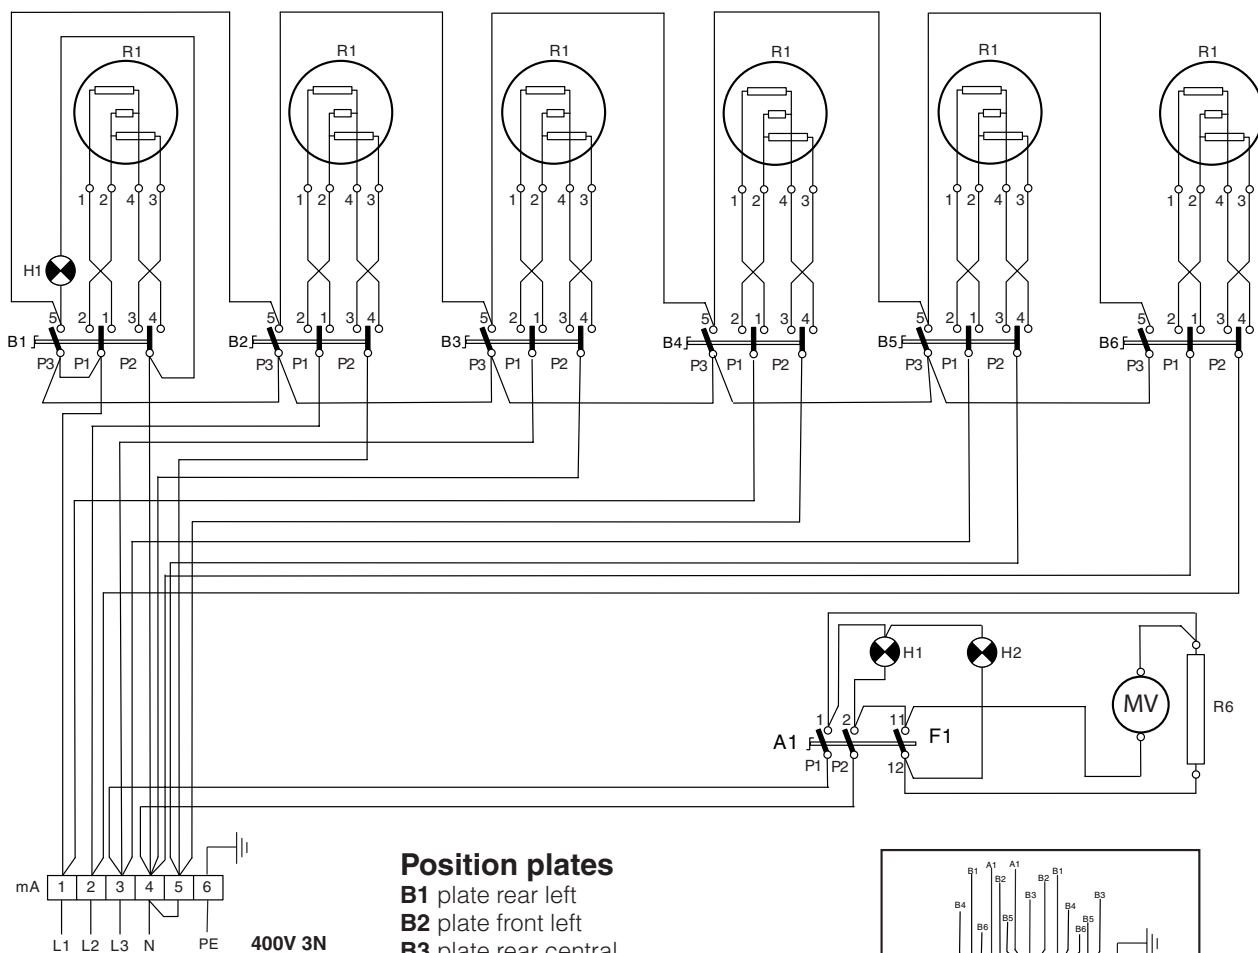


- mA** Terminal board
- B1** Commutator plate rear left
- B2** Commutator plate front left
- B3** Commutator plate rear central
- B4** Commutator plate front central
- B5** Commutator plate rear right
- B6** Commutator plate front right
- A1** Switch oven
- F1** Thermostat oven
- H1** Green indicator light
- H2** Yellow indicator light
- MV** Motorized fan
- R1** Heating element 2000 W
- R6** Heating element 2500 W oven
- Total power: 14.5 kW

R1

2000 w	6	•	•	•	•	•
1150 w	5	•	•	•	•	•
850 w	4	•	•	•	•	•
300 w	3	•	•	•	•	•
220 w	2	•	•	•	•	•
175 w	1	•	•	•	•	•
0	0	•	•	•	•	•
	5	2	1	3	3	4
	P3	P1	P2			

M74PQ - 4xR1

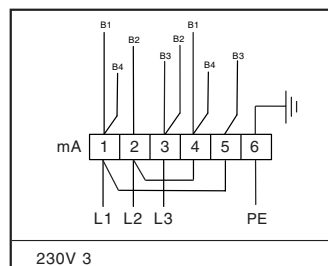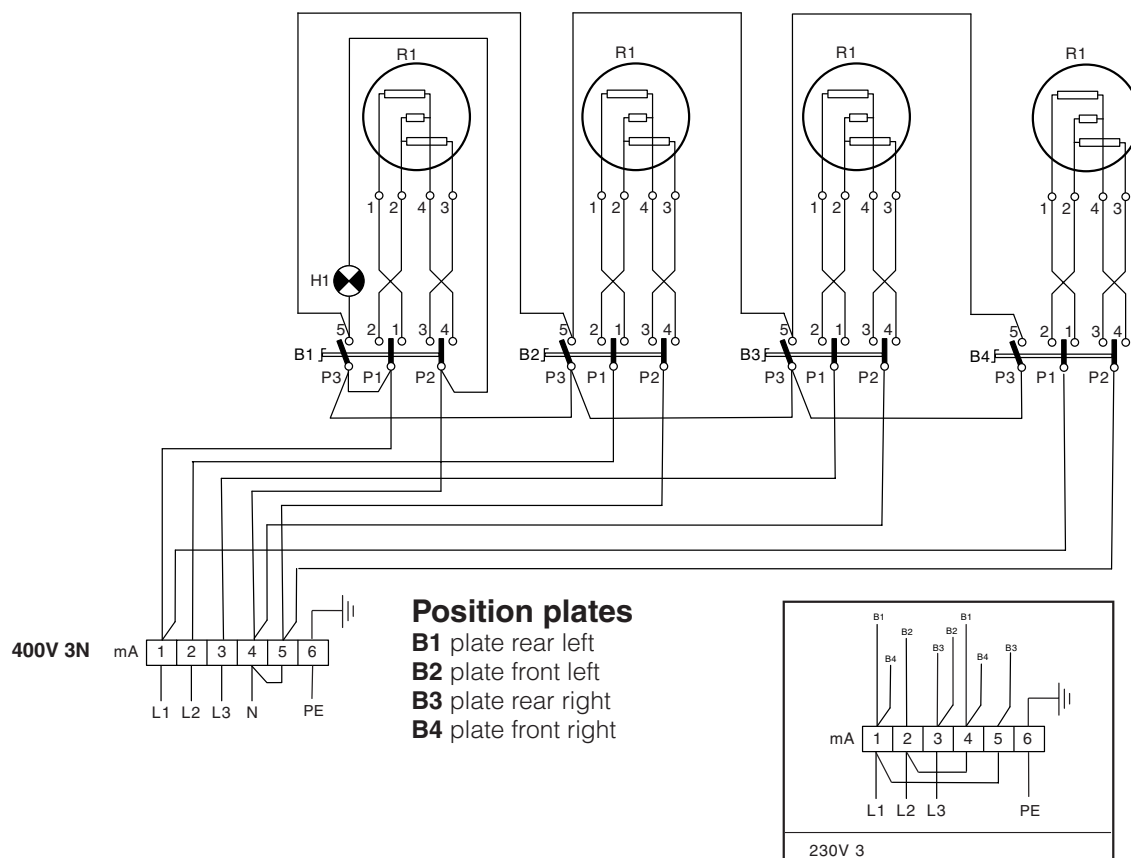


R1

2600 w	6	•	•	•	•	•	•
1800 w	5	•	•	•	•	•	•
1200 w	4	•	•	•	•	•	•
600 w	3	•	•	•	•	•	•
400 w	2	•	•	•	•	•	•
270 w	1	•	•	•	•	•	•
0	0	•	•	•	•	•	•
B1	5	2	1	3	3	4	
P3	P3	P1	P2				

- mA** Terminal board
B1 Commutator plate rear left
B2 Commutator plate front left
B3 Commutator plate rear right
B4 Commutator plate front right
H1 Green indicator light
R1 Heating element 2600 W

Total power: 10.4 kW

M74PQFXE - 4xR1 + 1xR6

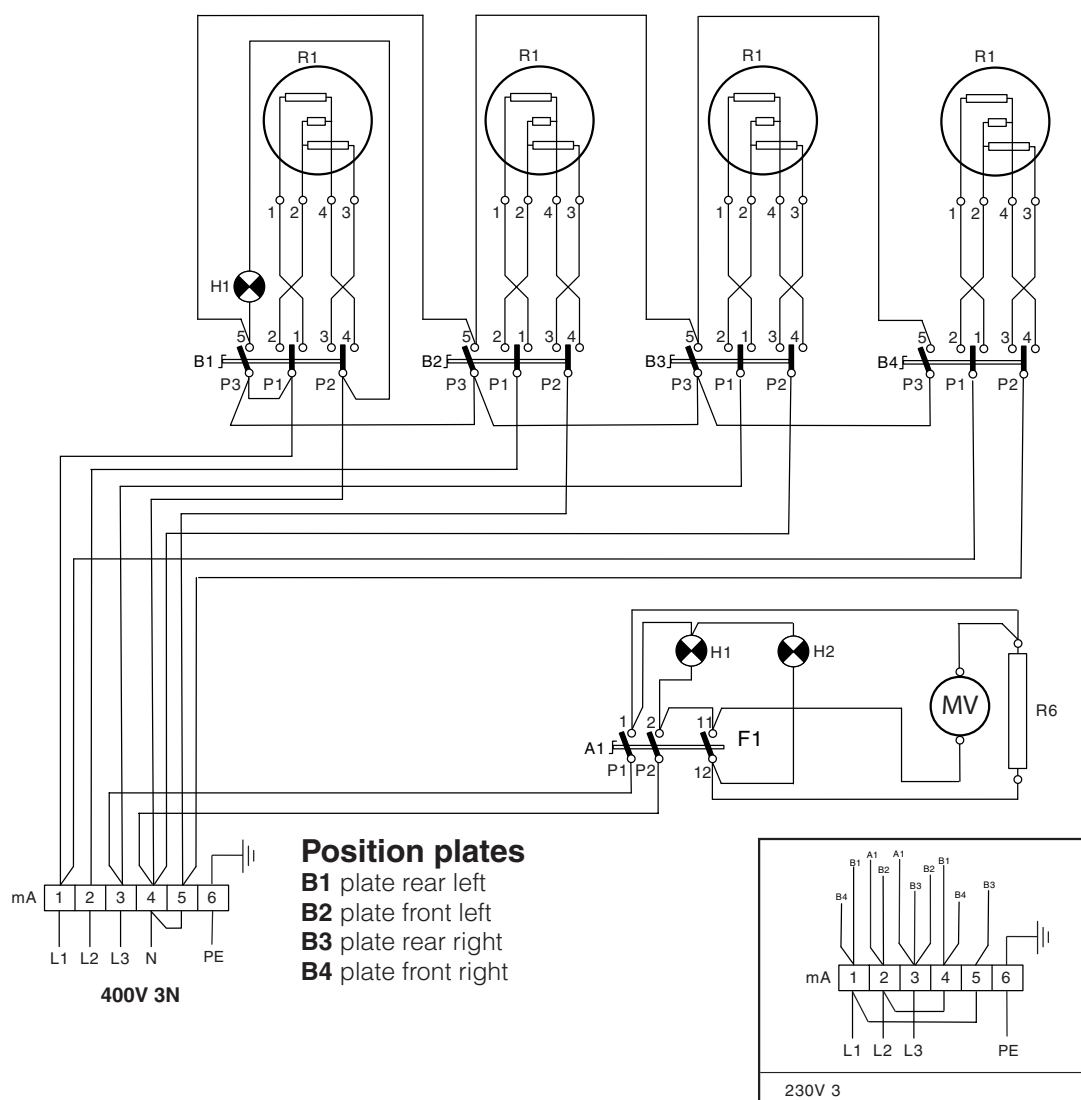

R1

2600 w	6	●	●	●	●	●
1800 w	5	●	●		●	●
1200 w	4	●			●	
600 w	3	●	●			●
400 w	2	●		●		●
270 w	1	●		●	●	
0						
B1	5	2	1	3	3	4
	P3	P1	P2			

- mA** Terminal board
B1 Commutator plate rear left
B2 Commutator plate front left
B3 Commutator plate rear right
B4 Commutator plate front right
A1 Switch oven
F1 Thermostat oven
H1 Green indicator light
H2 Yellow indicator light
MV Motorized fan
R1 Heating element 2600 W
R6 Heating element 2500 W oven
 Total power: 12.9 kW

WARNING

THE MANUFACTURER CANNOT BE HELD RESPONSIBLE
FOR ANY INACCURACIES IN THIS BOOKLET DUE
TO COPYING OR PRINTING ERRORS.
DUE TO ITS POLICY OF CONTINUAL PRODUCT IMPROVEMENT,
THE MANUFACTURER RESERVES THE RIGHT
TO MAKE ANY CHANGES DEEMED NECESSARY.
**THE MANUFACTURER CANNOT BE HELD RESPONSIBLE
IF THE INSTRUCTIONS CONTAINED IN THIS MANUAL
ARE NOT OBSERVED.**